


KitchenAid®

Mixer

MODELS:

KSM195PSBT5 (Butternut)


COLOR VARIATION PARTS

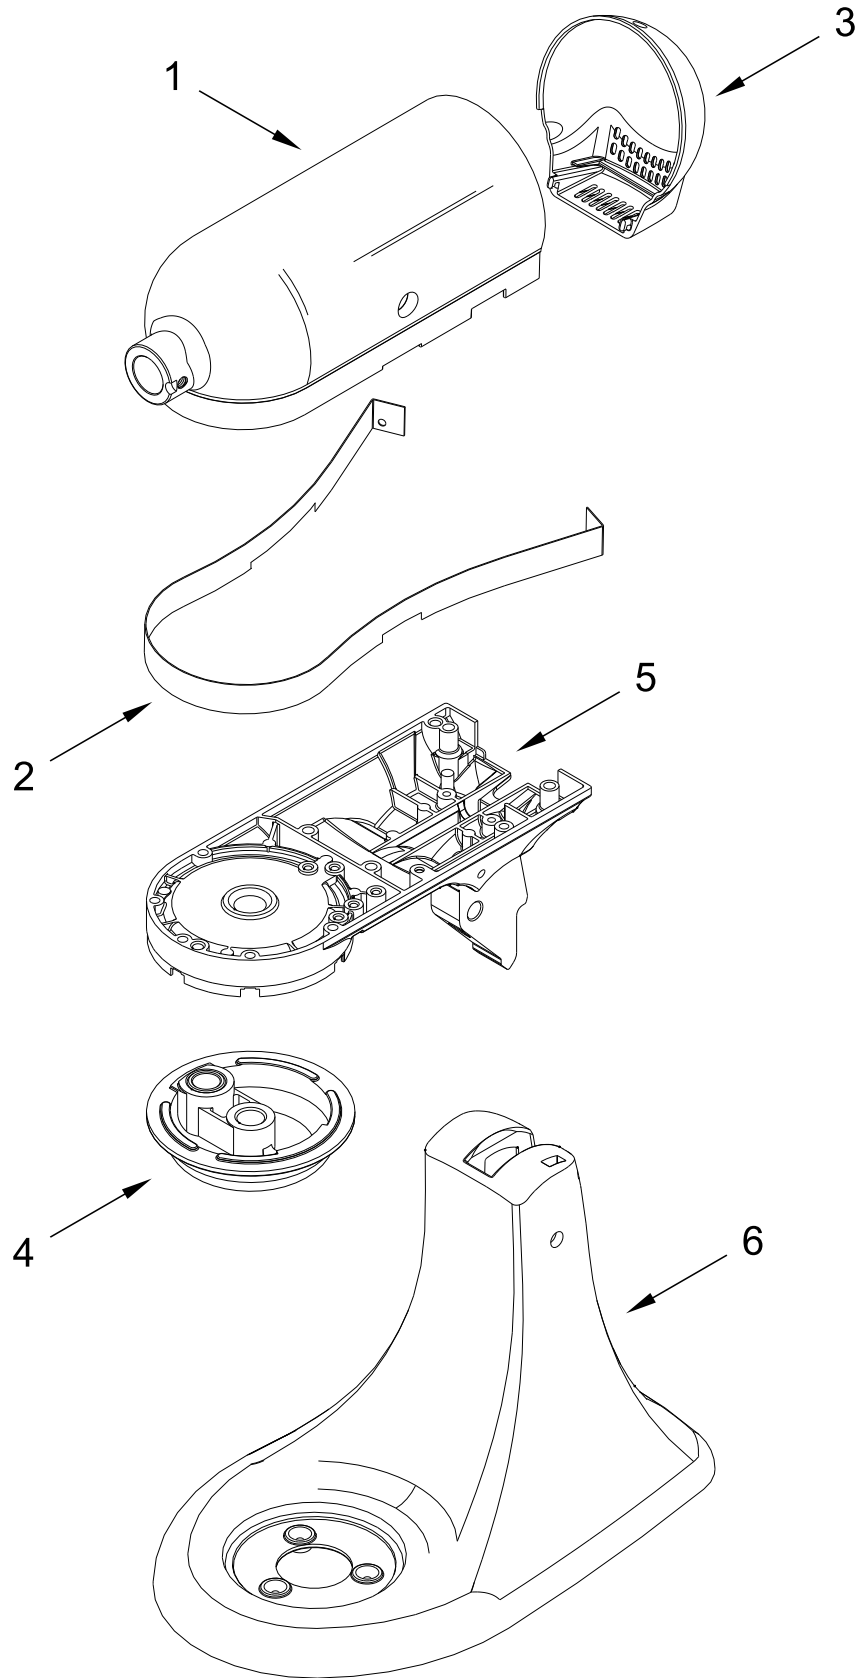

COLOR VARIATION PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11734659	Motor Housing (Butternut)	3	W11734649	End Cover (Butternut)	5	W11734657	Lower Gearcase (Butternut)
2	W11433195	Trim Band (Dark Platinum)	4	W11734660	Planetary (Butternut)	6	W11734656	Pedestal w/Feet (Butternut)


BASE AND PEDESTAL UNIT PARTS

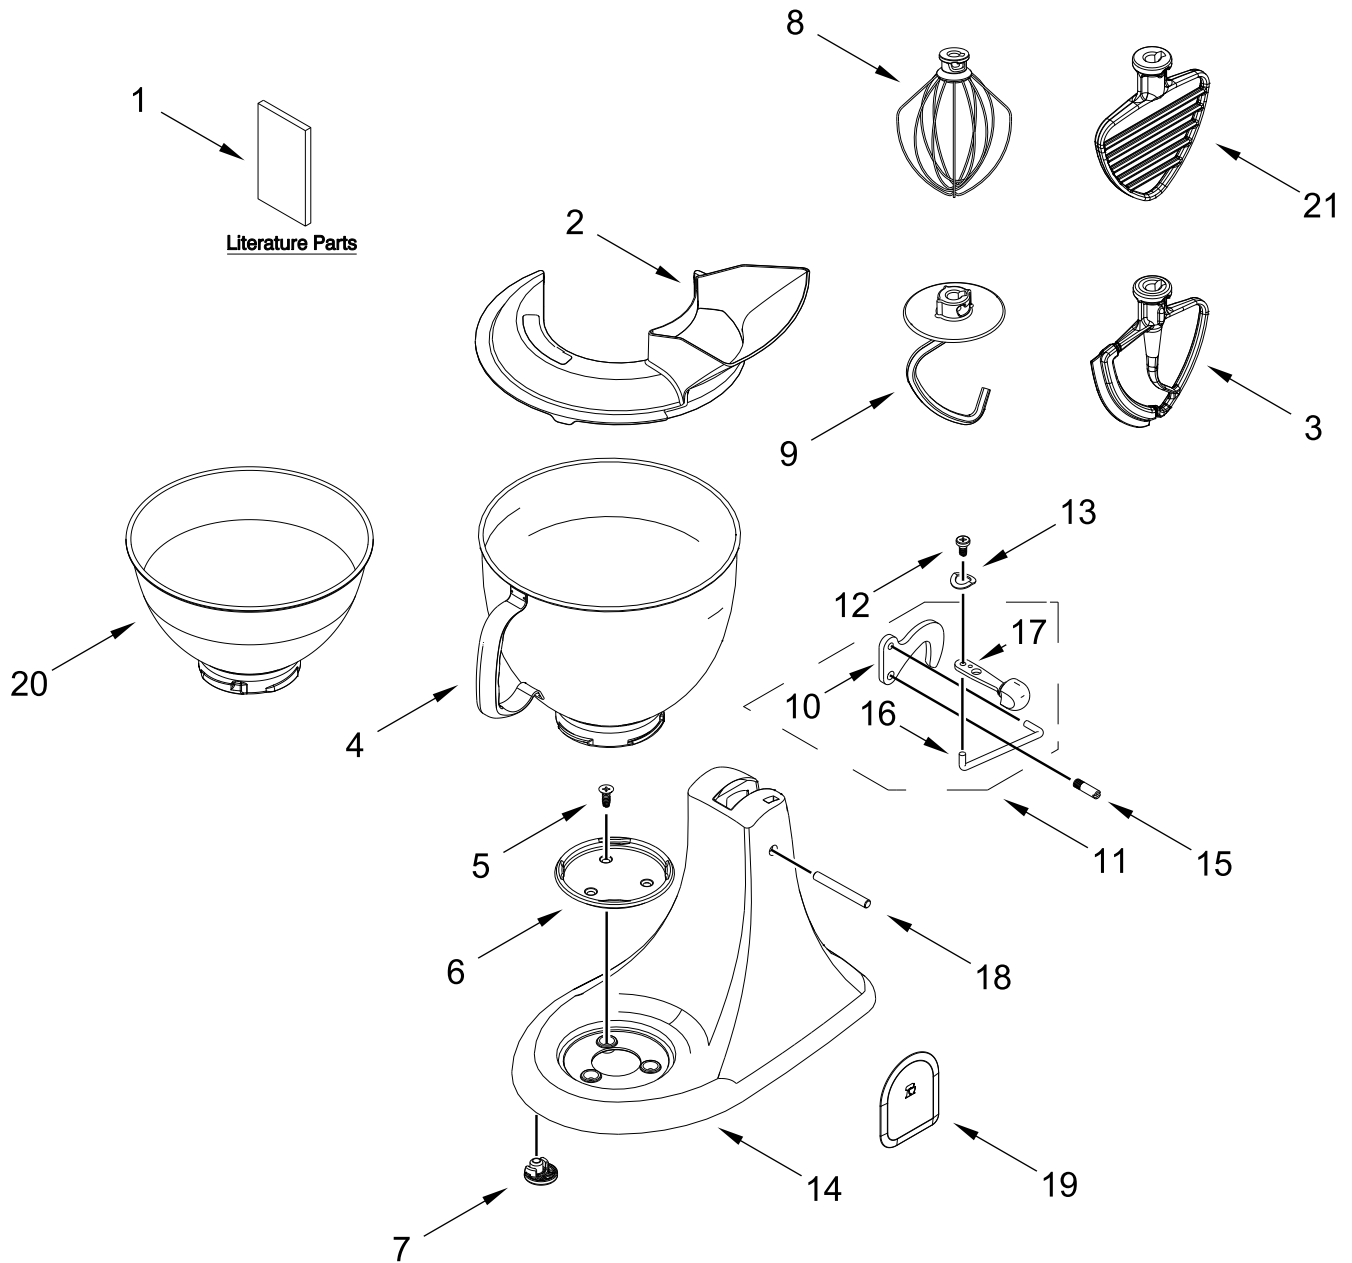

BASE AND PEDESTAL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W11555367	Hook, Dough (Silent Silver)	16	24450	Link, Latch
	W11555615	Use & Care Guide				17	W11300267	Lever, Latch (Chrome)
2	W11385618	Shield, Pouring	10	9709055	Latch	18	16910	Pin, Hinge
3	W11555365	Beater, Wiping (Silent Silver)	11	W11300265	Latch, Link Assembly (Chrome)	19	W11550306	Scraper, Pot (Nylon)
4	W11203341	Bowl, 5 Qt.	12	110679	Screw	20	W10713675	Bowl, 3 Quart
5	3400020	Screw	13	116241	Washer, Spring	21	W11555366	Beater, Pastry (Silent Silver)
6	W10191926	Cap, Bowl Screw	14		Pedestal (Refer to Color Variation Parts Page)			
7	W11626982	Foot						
8	9704329	Whip, Wire	15	W10572158	Screw			


CASE, GEARING AND PLANETARY UNIT PARTS

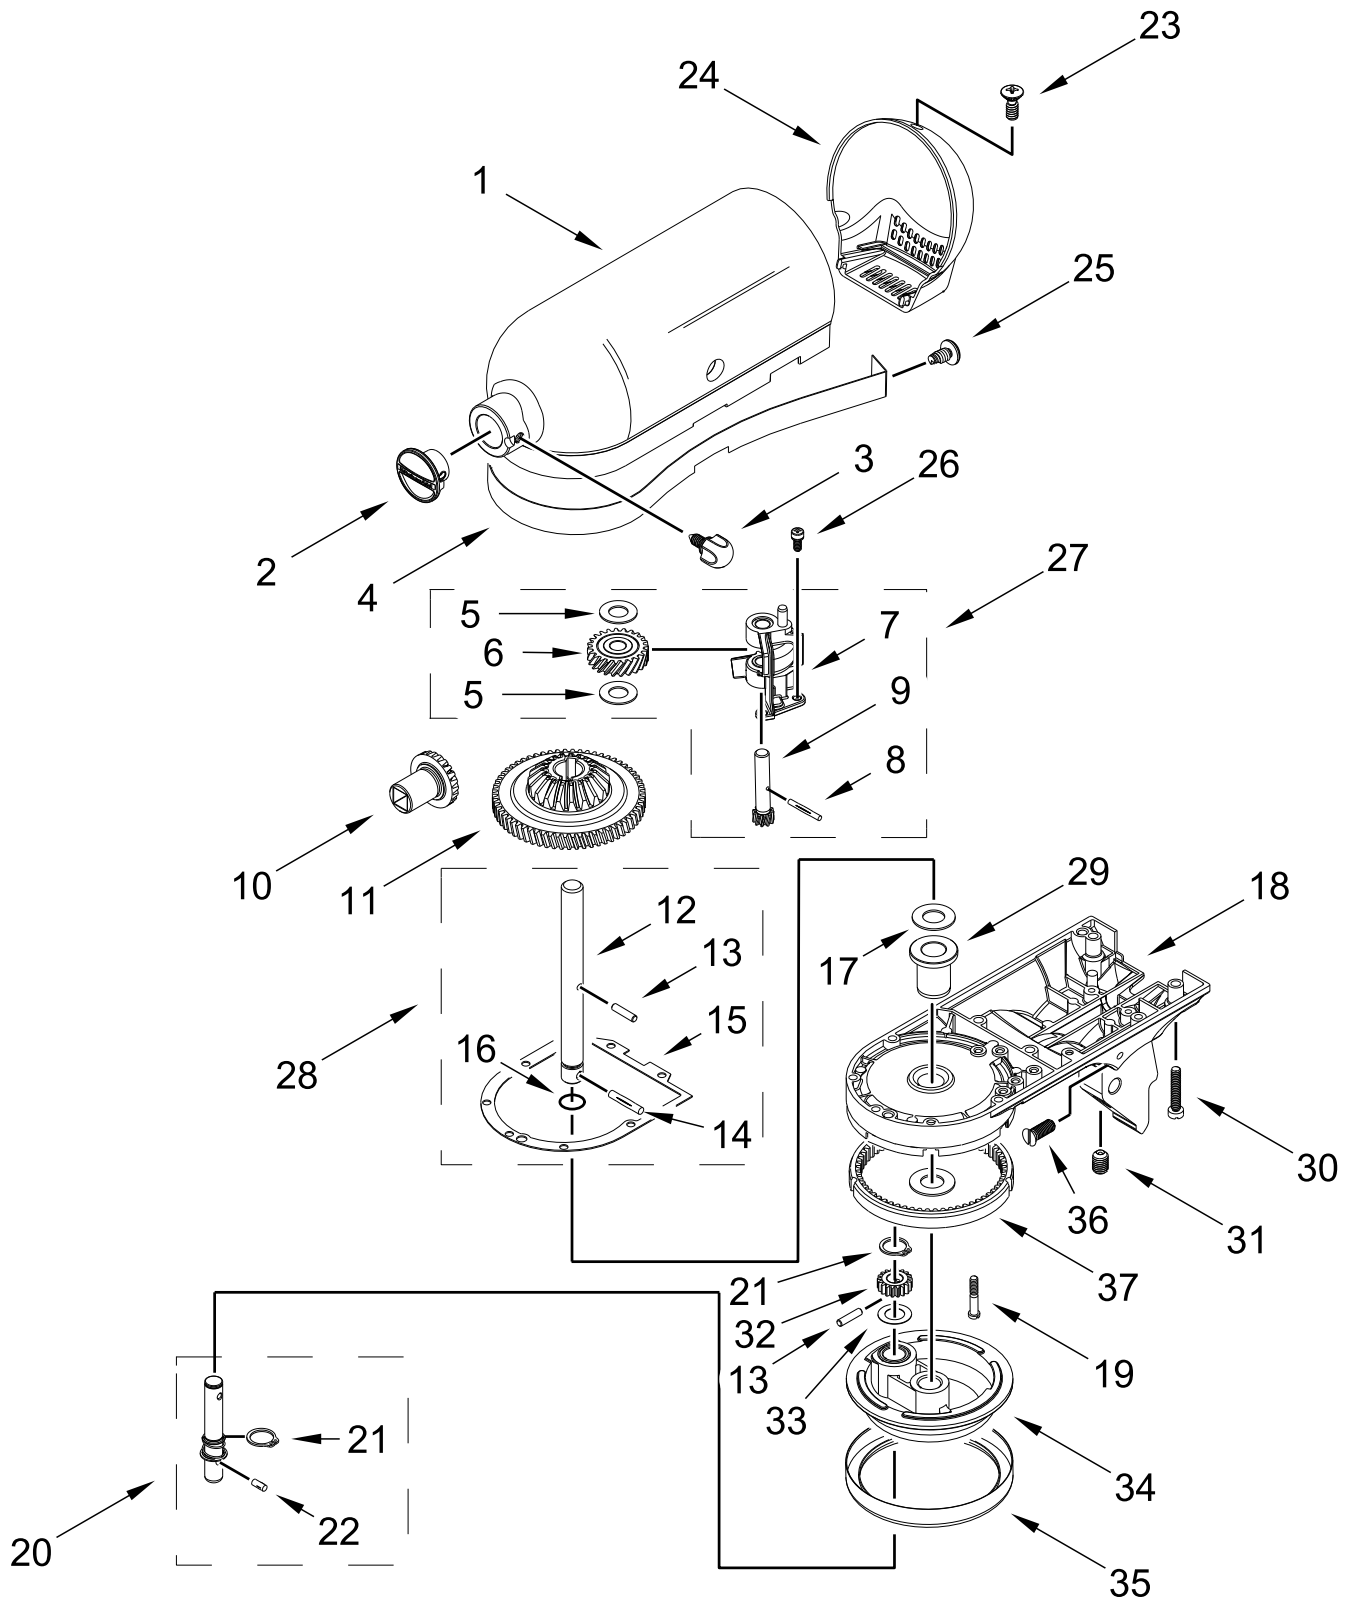

CASE, GEARING AND PLANETARY UNIT PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	12	240026	Shaft, Vertical Center	26	3400022	Screw
			13	240018-1	Pin, Agitator Shaft	27	240309-2	Worm Gear Bracket and Gear Assembly
2	W10753041	Cap, Attachment Hub	14	W11745418	Pin, Grooved	28	4160474	Shaft, Center Agitator Assembly
3	W10417014	Thumb Screw (Chrome)	15	240684	Gasket, Transmission	29	16897	Bearing, Lower Center
4		Band, Trim (Refer to Color Variation Parts Page)	16	67500-55	"O" Ring	30	9708652	Screw
			17	W10323378	Washer	31	W11134949	Screw
			18		Lower Gear Case (Refer to Color Variation Parts Page)	32	W10903540	Gear, Pinion
5	W10323373	Washer, Fiber	19	9708651	Screw	33	9706090	Washer
6	W11604364	Gear, Worm	20	243368	Shaft, Agitator	34		Planetary (Refer to Color Variation Parts Page)
7	240308	Bracket, Worm Gear and Bearing	21	9703438	Ring, Retaining	35	240285	Ring, Planetary Drip (Standard)
8	9705444	Pin, Grooved	22	W11533778	Pin, Groove	36	89411	Screw
9	240210-2	Gear, Pinion and Shaft	23	241877	Screw	37	W10903534	Gear, Internal
10	W11175140	Gear, Attachment Hub	24		Cover, End (Refer to Color Variation Parts Page)			
11	W11175138	Gear, Center Bevel Pinion	25	3400617	Screw			

MOTOR AND CONTROL UNIT PARTS

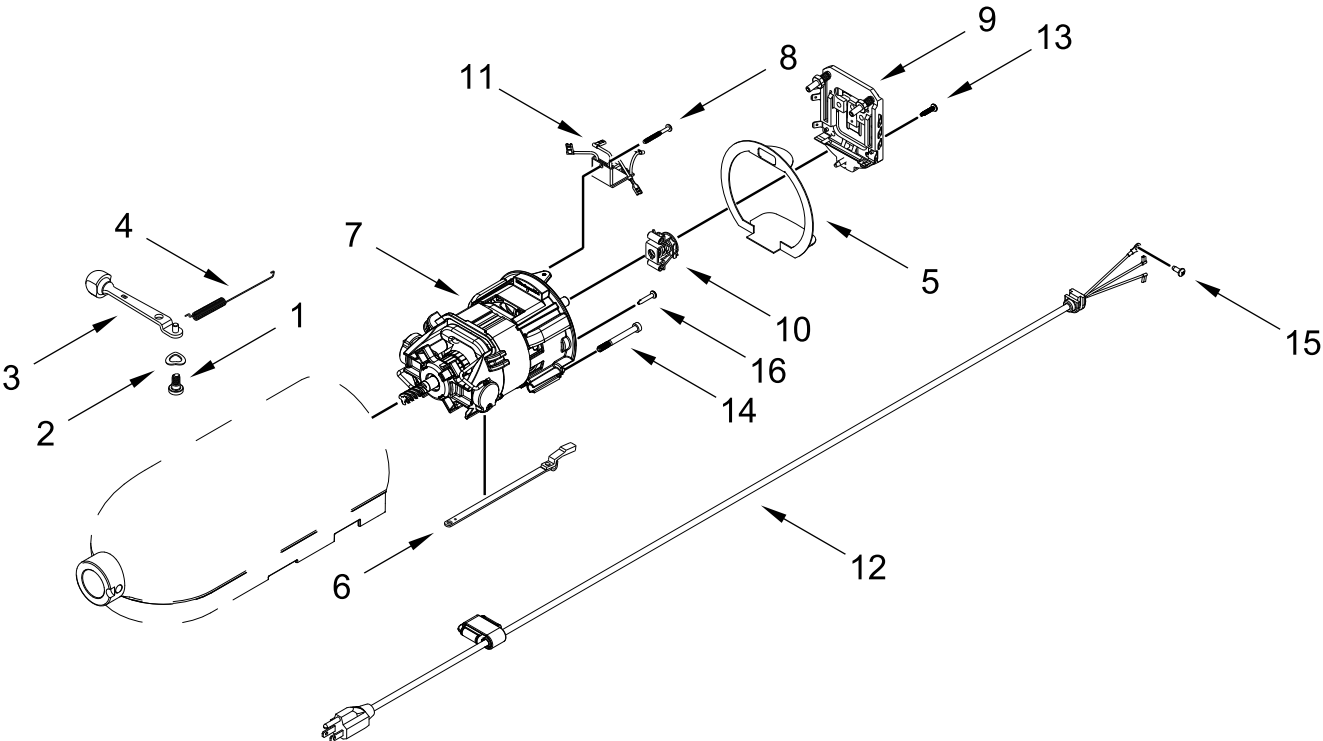

MOTOR AND CONTROL UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	110679	Screw	8	W10068260	Screw	14	W11573199	Screw, Motor Mounting
2	116241	Washer, Spring	9	W10119326	Control Plate Assembly	15	W10351843	Screw
3	9709276	Lever, Speed Control Assembly (Black)	10	W10330804	Governor Assembly	16	3184609	Screw
4	3183680	Spring, Control Plate	11	W10325124	Phase Control, 120 Volt			
5	240775-1	Seal, End	12	W11249139	Cord, Power (Black)			
6	W11435668	Link, Speed and Cam Assembly	13	3179559	Screw			
7	W11610686	Motor Assembly						